


90mm f1.25

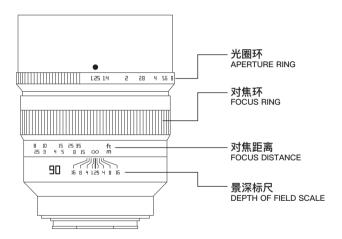

# 镜头参数 LENS SPECIFICATION

焦段	90mm	focal length	90mm
最大光圏	F1.25	Maximum aperture	F1.25
最小光圈	F16	Minimum aperture	F16
画幅	全画幅	Frame	Full Frame
对焦方式	手动	Focus method	Manual
滤镜尺寸	77mm	focal length	77mm
最近对焦距离	1m	Closest focusing distance	1m
视角	27°	Angle of View	27°
光圏叶片	10片	Diaphragm Blades	10pcs
光学结构	7组11片	Optical Design	11 Elements in 7 Groups
卡口	E/Z/GFX/X1D/R/L	Lens mount	E/Z/GFX/X1D/R/L
重量	1013g (约)	Weight	Around 1013g

### 安装镜头 INSTALL THE LENS

把镜头卡口上的圆点对准相机上的圆点, 然后顺时针转动镜头,听到"嗒"的声音代表镜头已安装到位。

#### ※安装镜头时请勿按相机上的镜头释放按钮

Align the dots on the lens mount with the dots on the camera, and then turn the lens clockwise. When you hear a "click" sound, it means that the lens is in place.

\*do not press the lens release button on the camera when installing the lens.

### 卸载镜头 UNINSTALL THE LENS

按下相机镜头释放的按钮, 然后逆时针转 动镜头即可取出。

Press the release button, and then turn the lens counterclockwise to remove it.





### 相机菜单设置 INSTALL THE LENS




# 05 相机菜单设置 INSTALL THE LENS


#### ▼ 索尼 **▼** SONY 快门/SteadyShot Shutter/SteadyShot 4 4/9 P 4 4/9 h 关 **⊠**Silent Shooting Off e-Front Curtain Shut. 开 On 允许 Release w/o Lens Enable Release w/o Card Enable 允许 无存储卡时释放快门 开 SteadyShot On SteadyShot SteadyShot Settings SteadyShot设置 MENU 🗢 ........ MENU 5 ........

▼ 7	量士		▼F	UJI		
	按钮/拨盘设置	2/3		BUTTON/DIAL SETTING	2/3	
I.Q.	快门 AF		I.Q.	ISO DIAL SETTING (A)	AUTO	
AF.	快门 AE		AF	SHUTTER AF		
~	无镜头拍摄	开	10	SHUTTER AE		
_	无卡拍摄	ON	4	SHOOT WITHOUT LENS	OFF	•
*	对焦环	C	·	SHOOT WITHOUT CARD	ON	
***	对焦环操作	非线性	100	FOCUS RING	C	
£ 1	AE/AF-LOCK设定	按下	£ 1	AE/AF-LOCK MODE	P	
	曝光补偿按钮设置	按下		APERTURE SETTING	A+ $\bigcirc$ M	
		別 退出			MAX EXIT	

## 光学结构图 OPTICAL DESIGN

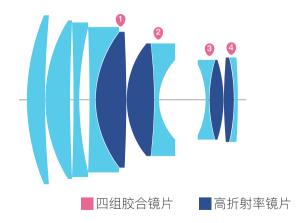

# MTF图 MODULATION TRANSFER FUNCTION

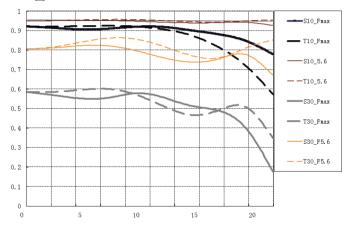





## ♠ 安全提示 WARNING

请勿将镜头或相机对着太阳及其他强光源, 以免损伤眼睛。 贮存镜头的环境应避免阳光直射,以免光线汇聚引发火灾。 请勿将镜头放置干儿童易触及的地方,防止不可估量的危险。

Do not point the lens or camera directly at the sun or other strong light sources to avoid eve damage.

The storage environment of the lens should be kept away from direct sunlight, so as not to converge and heat to cause a fire

Do not place the lens in a place where children can reach it to prevent immeasurable danger.

### 使用小贴士 TIPS

请在干燥环境下贮存镜头,避免受潮发霉,以免影响成像。

本产品不具有防水功能,使用过程应避开水源。

镜头清洁时,请先用气吹吹几下镜片表面,再用干净、柔软镜头布/纸轻轻擦拭。

Please store the lens in a dry environment to avoid moisture and mold, which may affect the image quality.

This product does not have a waterproof function, so avoid water sources during use.

When cleaning the lens, please blow the surface of the lens several times with air blower, and then gently wipe with a clean, soft lens cloth/paper.

以 座 右 铭 · 匠 心 永 隽

The Thinking Artisan