


TTARTISAN

# DOT SIGHT

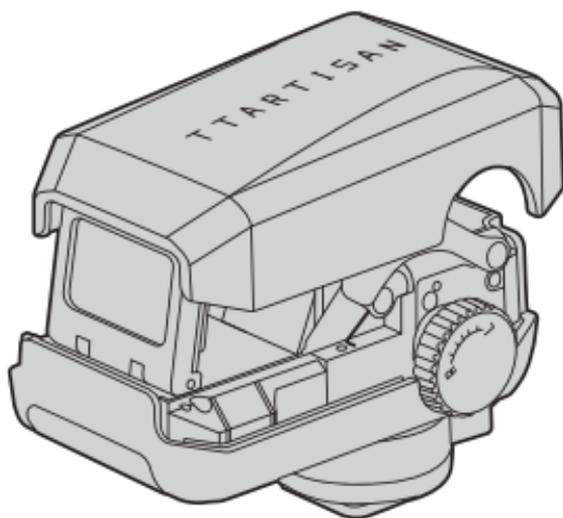

## User Manual


Please read the manual carefully before use and save it for future use.

# Specifications

Product	Dot Sight
Dot color	Red/Green
Brightness	5 levels of brightness settings
Battery	3V CR2032 button battery
Battery life	3 levels of brightness for 100 hours
Weight	73g
Size	Cover UP: Around 7.5*4.7*6.9cm  Cover Down: Around 7.5*4.7*4.9cm

# Function ①

Upper cover

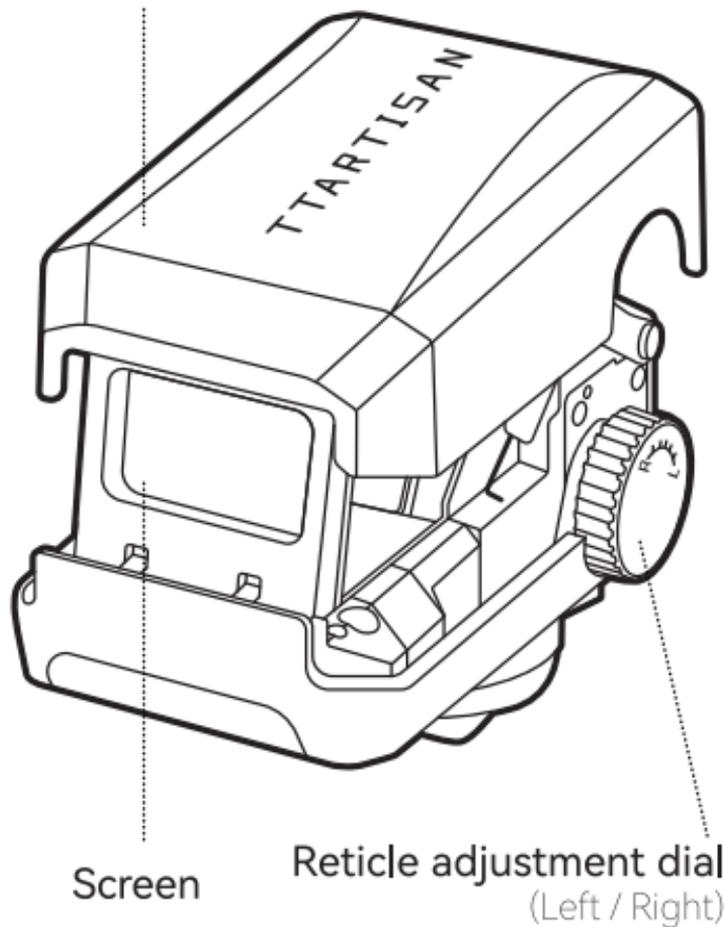


Screen

Reticle adjustment dial  
(Left / Right)

## Function ②


- ① Reticle color selection button
- ② Brightness level · Up
- ③ Brightness level · Down
- ④ Pop-up control
- ⑤ Locking
- ⑥ Cold shoe mount
- ⑦ Reticle adjustment dial (Up / Down)
- ⑧ Battery-chamber cover lock pin
- ⑨ Battery-chamber cover

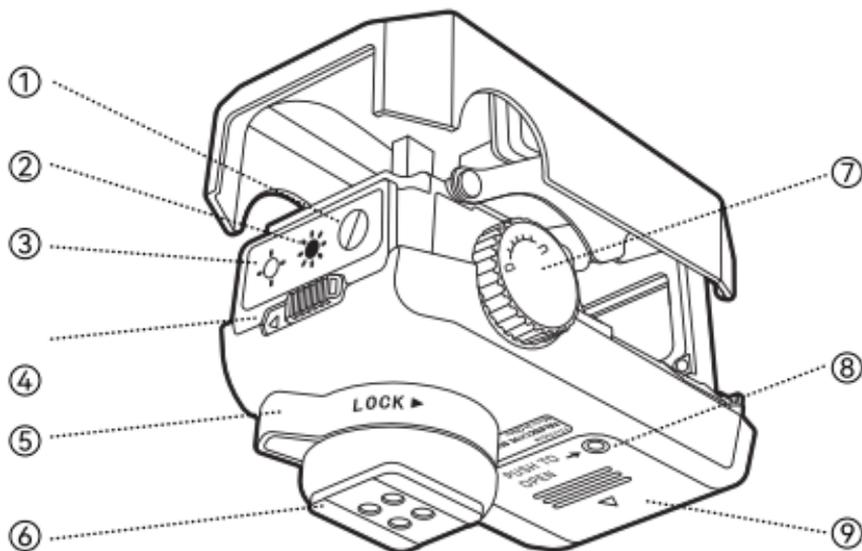

# Battery



Keeping the battery-chamber cover lock pin pressed with a pen or other pointed object, slide the cover open as shown.

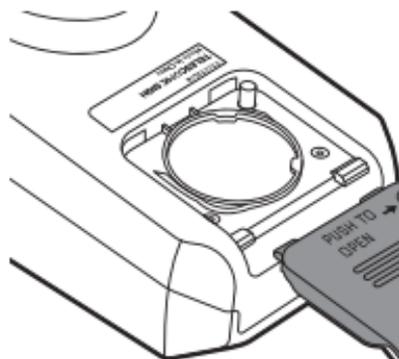


- 1.Requires a CR2032 battery;
- 2.Be sure the battery is in the correct orientation;
- 3.Do not get wet and keep the battery chamber clean.

**Slide**


# Attaching the Sight

Mount the sight on the camera accessory shoe as shown.

1. Some designs of camera or lens may interfere with attachment or removal.
2. Do not use the built-in flash, as it will press against the sight when raised.

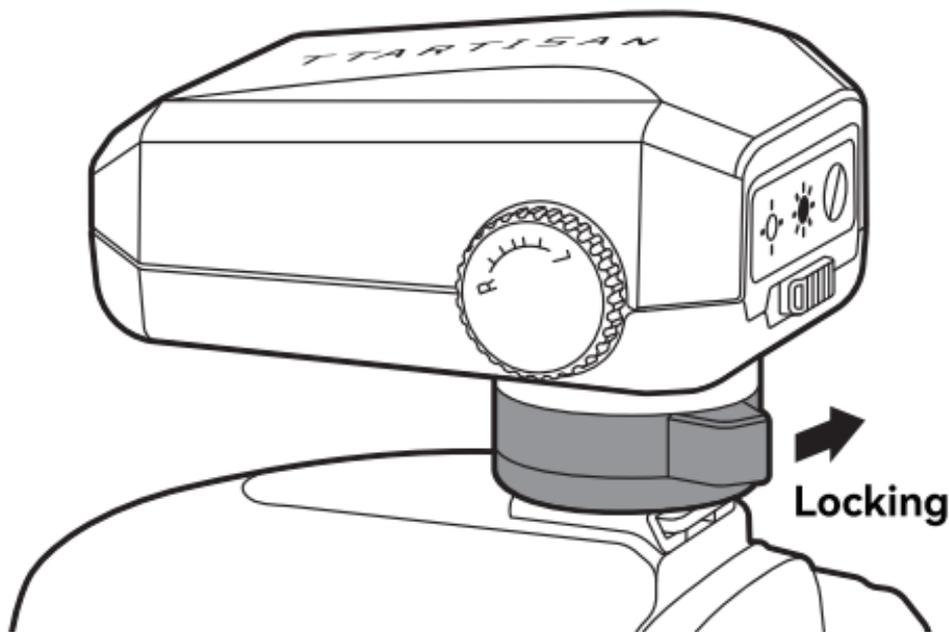

# Turning the Sight On or Off

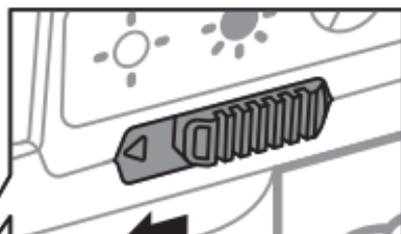

## Pop-up control

Slide the pop-up control to raise the sight. The reticle will turn off if no operations for 6 hours. And it can be turned off by pressing and holding the color selection button for 3 seconds. Press the color selection button to turn on the reticle again. Turn off the sight by lowering the upper cover and snapping it into place.





1. When the dot appears on the screen, the sight is turned on;
2. The dot appears to flash, the sight is in low battery mode;

# Positioning the Reticle

## First, fix the camera

- ① Choose an object the same distance from the camera as your subject and frame it in the center of the monitor or viewfinder. If you are using a zoom lens, we recommend that you set it to the focal length at which it will be used during shooting. Note that you may not be able to position the reticle satisfactorily if the object is too close; we recommend choosing subjects or objects at least 10 m (33 ft) distant (all figures are approximate).
- ② From a position directly behind the sight, rotate the reticle adjustment dials to position the reticle over the object in the sight's screen.

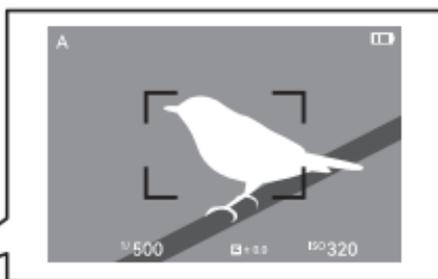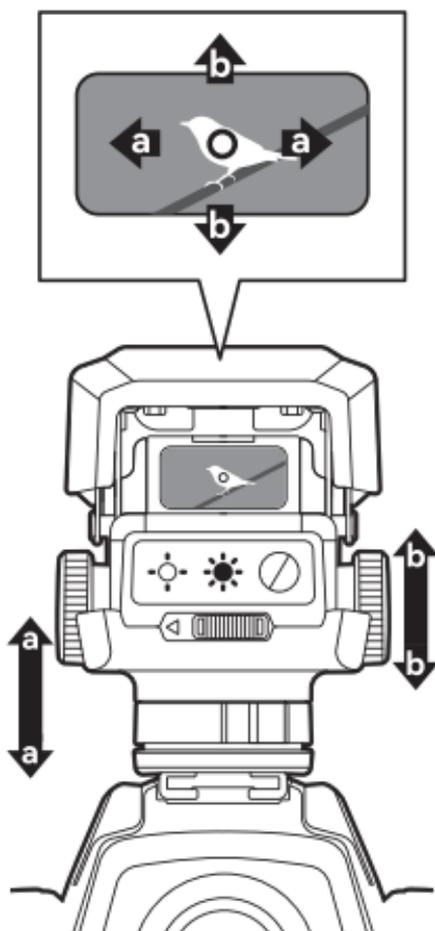

# Warranty Matters

Lower the sight for storage or transport.

Some designs of camera or lens may block the sight.

Do not touch the screen with your fingers, use a lens cleaning tool to clean the screen.

Remove the battery if this product will not be used for an extended period.

**This product has a one-year warranty from the date of purchase. The following conditions are not covered by our warranty service:**

1. Counterfeiting and prevention of the company's products.
2. Accidental or man-made damage, water, bump, etc.
3. Unable to provide documents, order number and other proof of purchase.
4. Beyond the warranty period.

# Warranty Card

Purchase date

Purchase channels

Problem description .....

.....

.....

.....

Contact info

Return address

# Video



**Dot Sight  
Instruction Video**

YouTube

**For more details  
Please visit our official website**

[www.ttratisan.com](http://www.ttratisan.com)